


DEFINITION OF SPAN

K-SERIES

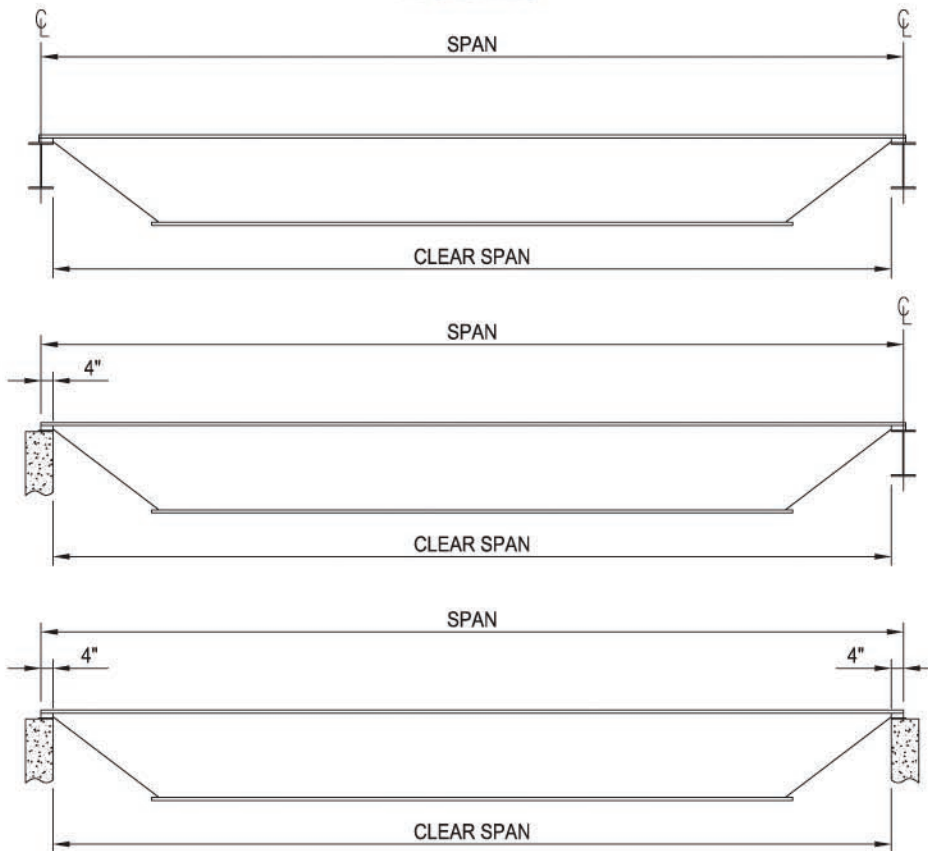

LH, DLH-SERIES

$$\text{SPAN} = \text{CLEAR SPAN} + 12''$$

Notes:

1. Design Length = Span – 4".
2. Parallel chord joists installed to a slope greater than 1/2" per foot shall use Span defined by the length along the slope.

